

RINGO / WEST

RIN 075..ES WS 075..ES

RIN 071..ES WS 071..ES

RIN 070.. WS 070..

RIN 075.. WS 075..

RIN 071.. WS 071..

RIN 072.. WS 072..

RIN 073.. WS 073..

RIN 074.. WS 074..

RIN 080.. WS 080..


RIN 085.. WS 085..

RIN 081.. WS 081..

RIN 130.. WS 130..


RIN 135.. WS 135..

RIN 131.. WS 131..

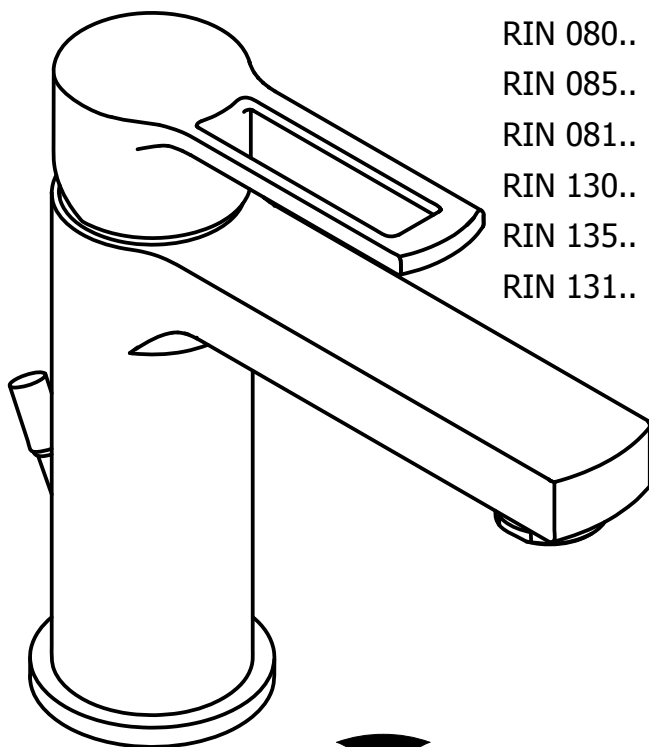

1


Montaggio Assembly

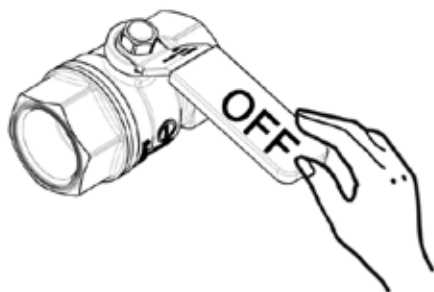

$65 \pm 5^{\circ}\text{C}$



$15 \pm 5^{\circ}\text{C}$

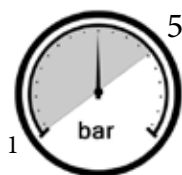


MIN - MAX



OK


2

a

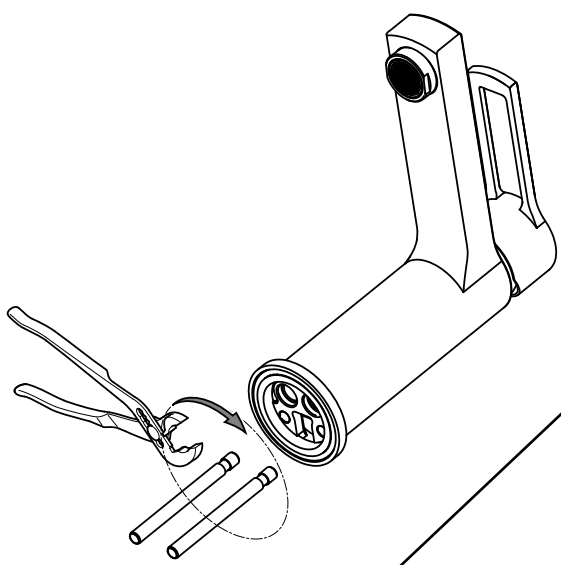

075ES 071ES
071 070 075
072 073 074
081 080 085
131 130 135


b

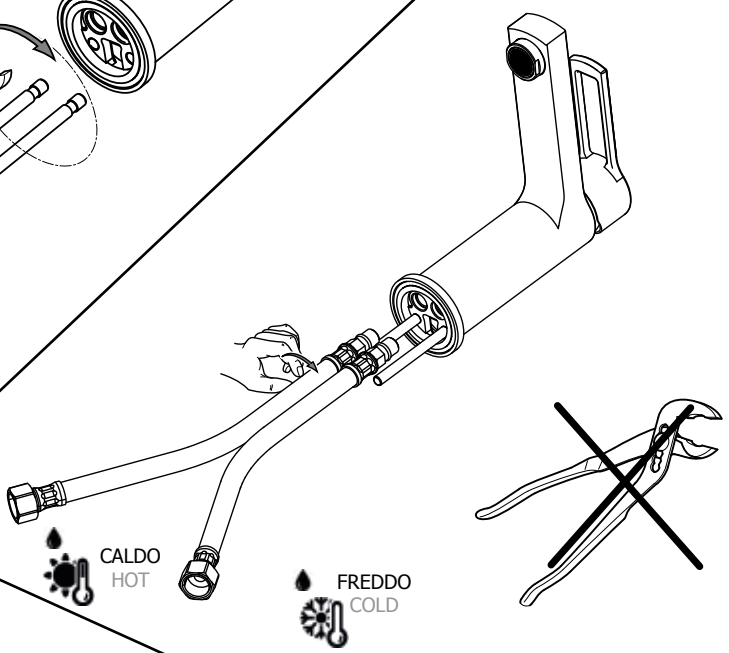

c


 CALDO
HOT

 FREDDO
COLD


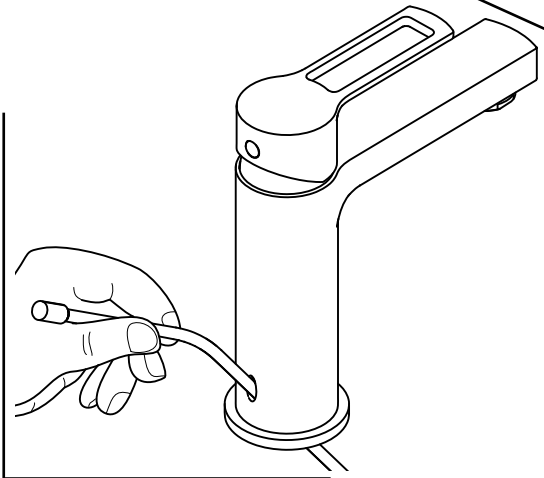


075ES
070 075
072 073
080 085
130 135

d

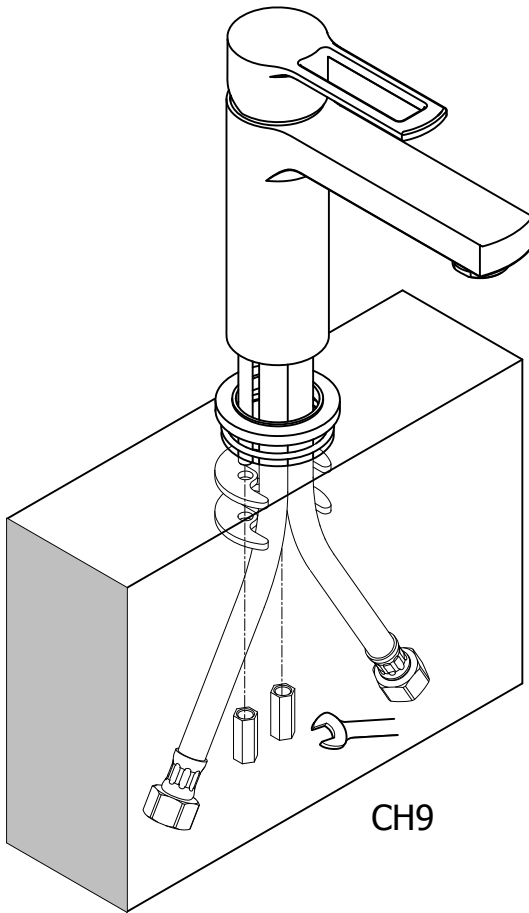

075ES 071ES
071 070 075
072 073 074
081 080 085
131 130 135

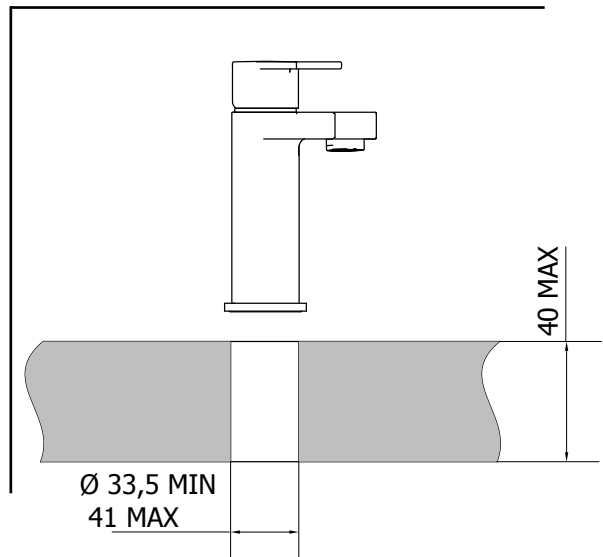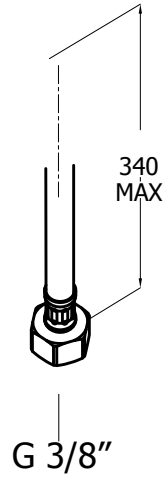

075ES



070 075

072 073

080 085

130 135




e

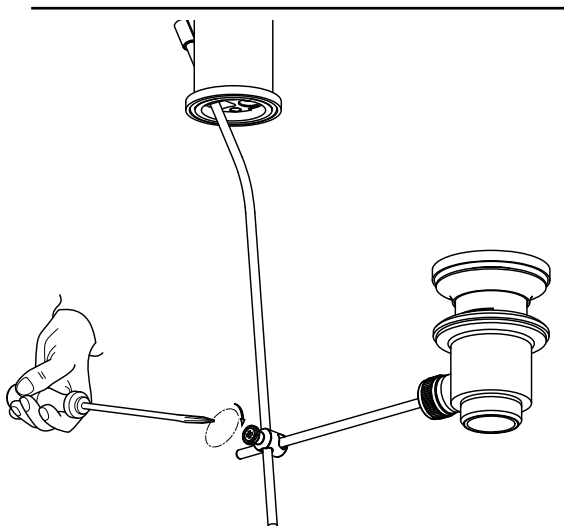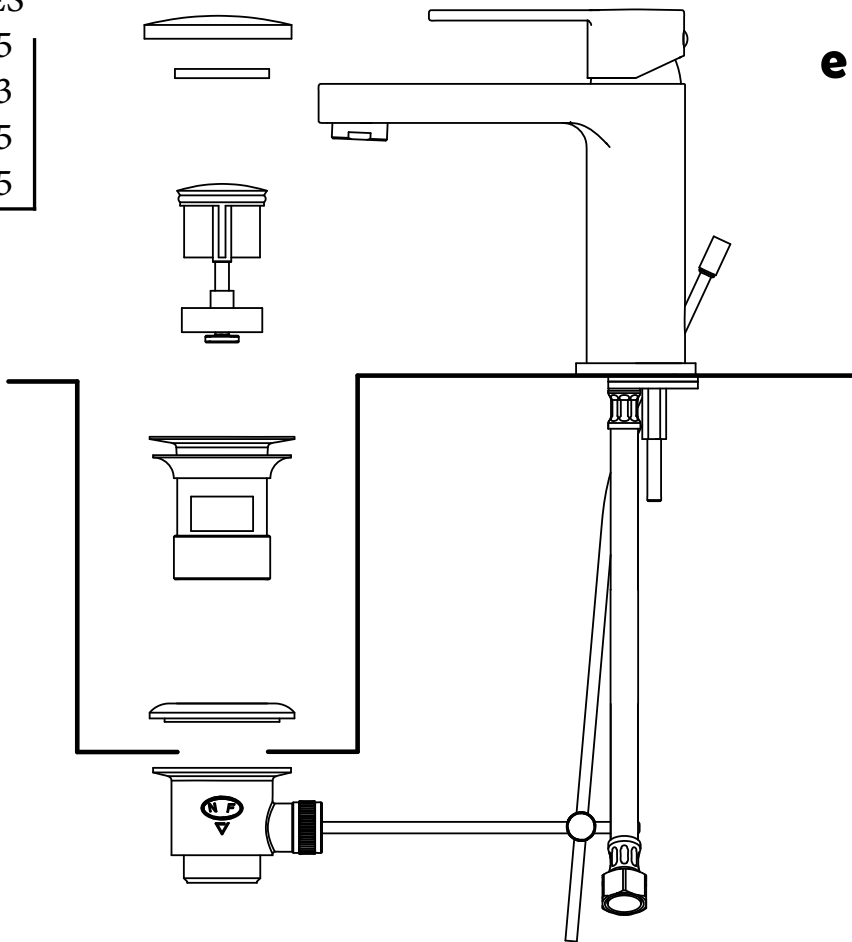

F




Funzionamento Working

075 ES
071 ES

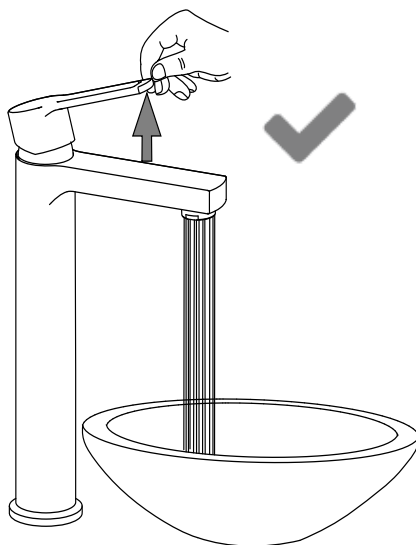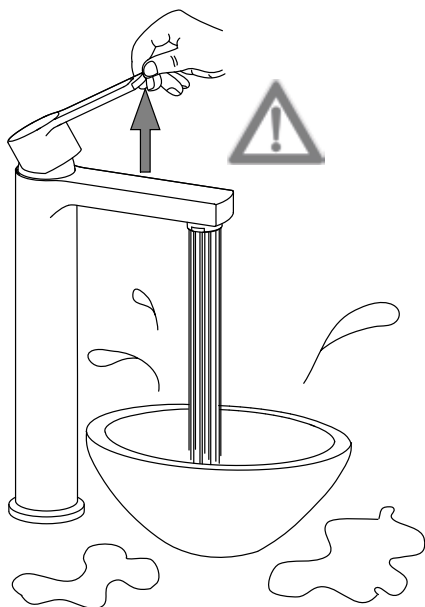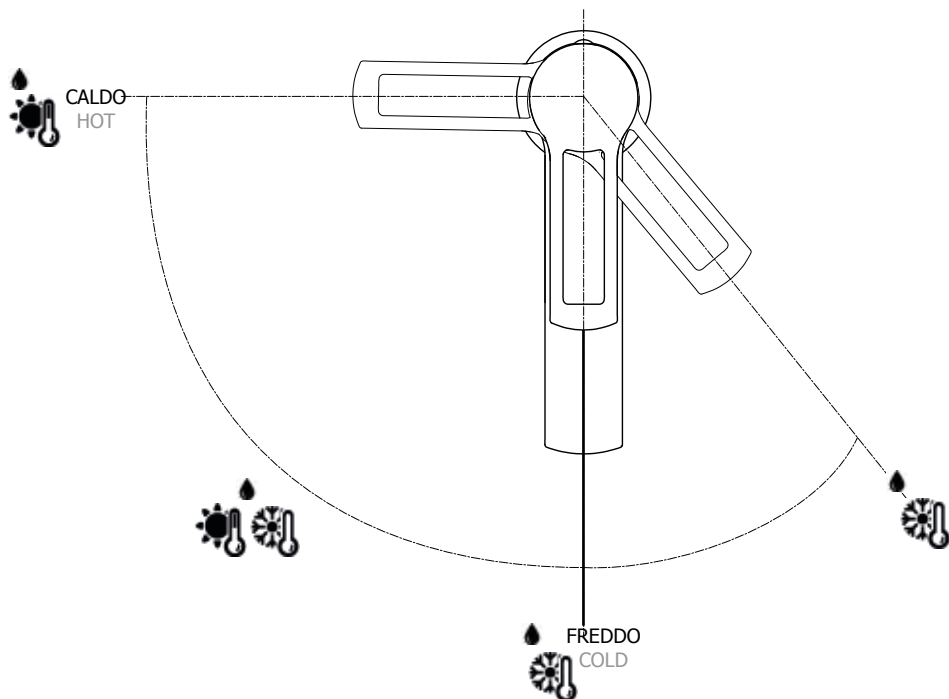

M

Manutenzione
Service

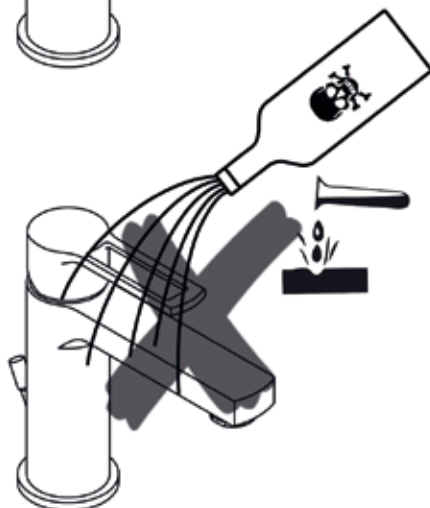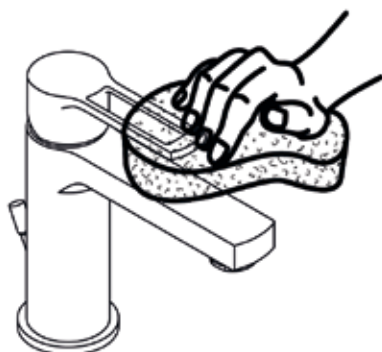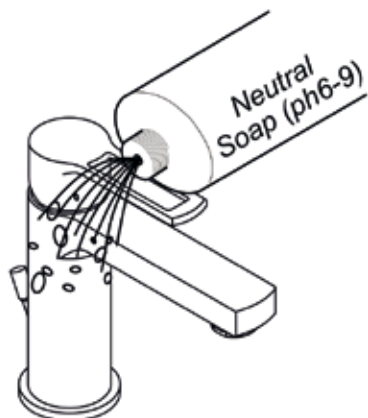




Sostituzione Cartuccia How to replace Cartridge

075ES 071ES
071 070 075
081 080 085
131 130 135


a

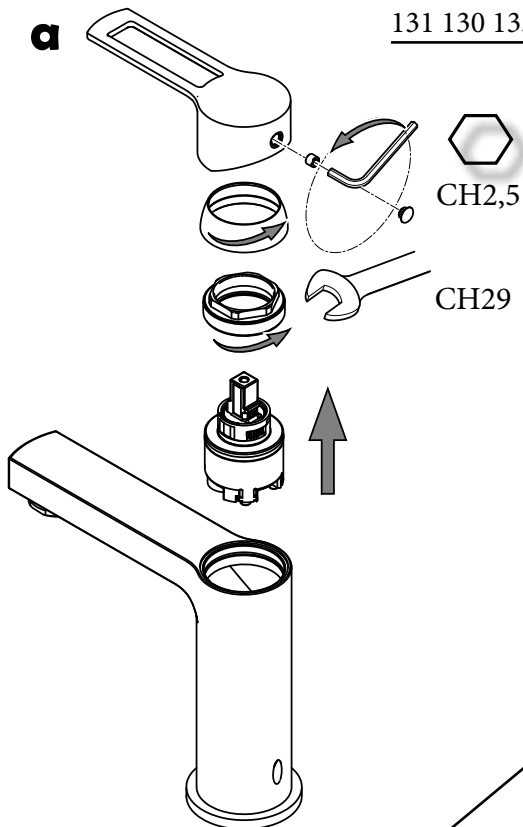

075ES 071ES
071 070 075
081 080 085
131 130 135

b

Sostituzione Aeratore How to replace Aerator

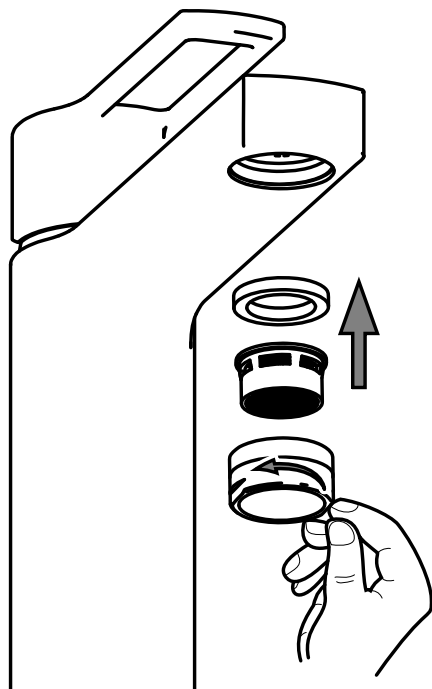

c

Sostituzione Snodo How to replace Joint

131 130 135

